 


HangTight Banner Frame Initial Installation - Installing the Tracks

Your Model:


- 3 Ft Arms Tongue & Groove Style
 4 Ft Arms Clamp Bar Style

Banner Length




1. Determine Optimum Placement

Your HangTight Banner Frame operates on several tracks that are mounted to the flat wall surface. Prior to installing the tracks, determine the best position on the building for optimum visibility. Measure from fixed points on the building to establish a level horizontal line, extending about a foot longer the longest banner you wish to display. Use a chalk line or straight edge to mark your line. The line should be level.

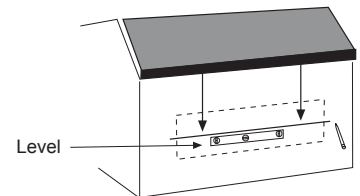

Note: Dotted line represents position of banner after installation.


2. Mark the Outside Edges

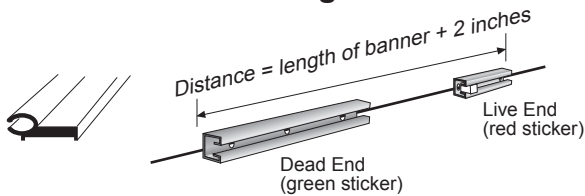

TONGUE & GROOVE STYLE MODELS:

On your line, mark each end of the measurement of the longest banner you wish to display PLUS 2 inches. The outside edges of the outside tracks will line up on your marks.

Note: T&G Style Models require "pole pocket" style banners

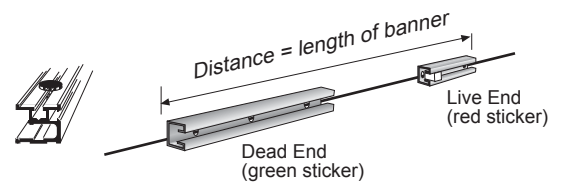


CLAMP BAR STYLE MODELS:

On your line, mark each end of the measurement of the longest banner you wish to display. The outside edges of the outside tracks will line up on your marks.

3. Fasten Outside Tracks to Wall

Position the outside tracks along your line, at the outside edges you marked as shown. Fasten the outside tracks to the wall using the 1.5" screws provided, through each of the pre-drilled holes in the tracks. Use a level to be sure the tracks are on an even plane.


Screws provided are for wood or wood backed surfaces only. For masonry surfaces, use 1/4" x 1.5" Tapcon screws or Anchor Bolts. For sheet metal surfaces use 1/4" Molly or toggle bolts. Use a silicone or caulk sealant to cover screw heads if desired. For Drivet surfaces, call Voxpop for assistance.

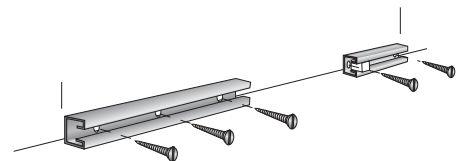

4. Position & Fasten Center Tracks (Models for banners 12 ft & up)

If your model has one or more Center Tracks, position them on your horizontal line equidistant between the outside tracks. Fasten as outlined above.

You are now ready to install your banner. Please refer to separate instructions, "Installing the Banner" attached.

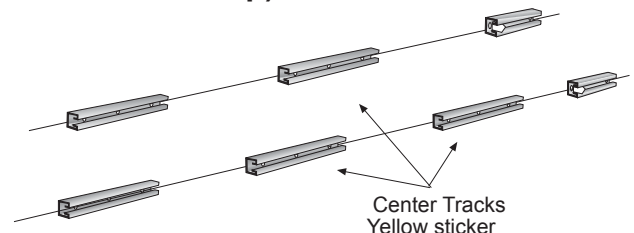

Manufactured in the USA by

VOXPOP

MARKETING SYSTEMS

10746 Worcester Highway P.O. Box 200

Berlin, MD 21811 800-386-9767

www.voxpopms.com

Questions? Problems? Call Voxpop for assistance.

1-800-386-9767

or e-mail service@voxpopms.com