

TopLine "SP" Banner Frame Double Base Frame Models 3x15 thru 4x20 Installation Instructions

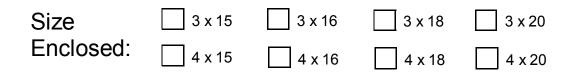

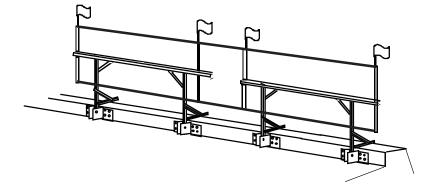

Manufactured in the USA by



10746 Worcester Highway P.O. Box 200 Berlin, MD 21811 800-386-9767

www.voxpopms.com

IMPORTANT CAUTION & SAFETY NOTICE !! Read Before Installing !

The TopLine Banner Frame must be installed and used exactly according to these instructions in order to validate the warranty. Installation should be performed by a knowledgeable mechanic or maintenance person. Voxpop does not provide sealants or other moisture inhibitors. Installation of this product may void roofing material warranties. Consult your roofing material manufacturer for recommended weatherproofing steps. The mounting surface must be a minimum 3/8" plywood. Mounting surfaces other than wood will require mounting fasteners or permanent supports not included with this product. Use of this product in winds exceeding 40 MPH may result in damage to the framework, your building, or other property. Any installed banner MUST BE REMOVED in the event of high winds. Questions ? Call Voxpop for installation advice BEFORE installing.

STEP ONE - PREPARATION & LAYOUT


The TopLine "SP" Model is comprised of (2) base frames that measure uo to 24 ft across, depending on your model size. Your frame is designed for installation on the back side of the parapet (knee) wall on your building's roof. A minimum 4" high vertical parapet is required, with a minimum 6" flat ledge. The frame allows for a 2" offset parapet header. Shims may be required for larger offsets.

Select a location for your finished display that will maximize its merchandising effectiveness. Typically this will be the front of the building or on the front portion of the side of the building, where traffic will notice. Then, examine the front page of this instruction booklet to get a visual overview of how the finished frame will appear.

TOOLS : NEEDED

Level #2 or #3 driver bit (2) 7/16 deep socket wrenches or ratchets

We recommend the use of sealants or caulking (not included). Bracket fasteners included are for strong, wood backed surfaces only. Call Voxpop for assistance with alternate surfaces. Two people are needed for easy installation of this product.

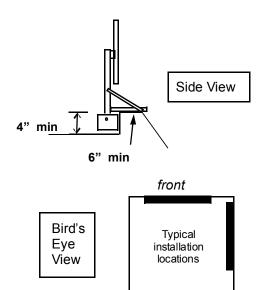

2.5" bolt

STEP TWO - INSTALLING THE BASE FRAME


Power drill or driver

Adjustable crescent wrench

Measuring tape

1. ASSEMBLE LEG BRACKETS

Lay each of the (4) 4 ft (deep channel) Legs down, channel side up. Fasten (2) Mounting Brackets to each, exactly as shown. Use the 2.5" bolts and wing nuts. Tighten securely.

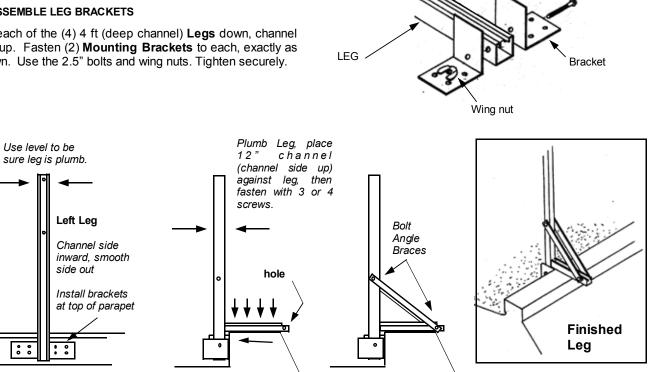


2. FASTEN LEFT LEG TO WALL


:


• •

Fasten an assembled Leg to the back side of the parapet wall at the very left side of your display. This will be the left leg of the left portion of the frame (see front page). For wood surfaces, use the 1.5" screws provided. Be sure to fasten at all 16 holes, and be sure screws are in tight. Place a 12" Channel section against the Leg, directly in front, with the side hole in the channel away from the Leg. Fasten the channel into the parapet header with 3 or 4 screws - be sure to get a good bite. Then, fasten (2) Angle Braces to the Leg with a 2.5" bolt, washer and wing nut. Line up the holes at the bottom of the Angle Braces with the side hole in the Channel, and fasten with a bolt, washer and wing nut. If the holes do not line up, you may need to re-set the 12" Channel section. We recommend using caulk or silicone sealant at fastening points.

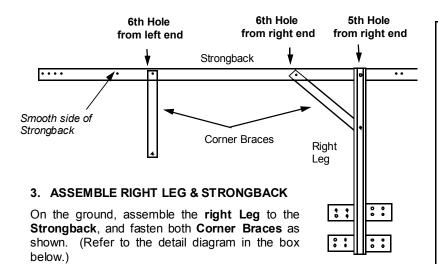

Fasten the Leg at the <u>5th</u> hole inward and the Corner Braces at the <u>6th</u> holes inward as shown. Fasten the **right Corner Brace** at the pre-drilled hole in the **right Leg**

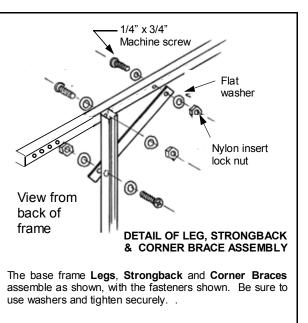


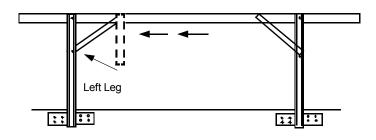


4. ATTACHTOLEFTLEG

(Best done with 2 people)

Lift the **left Strongback** with the **right Leg** attached, and bolt it to the **left Leg**. Raise it until it is level, and fasten the **left Corner Brace** to the **left Leg**. (Refer to detail at top of page.) Then, screw the **right Leg** to the wall.

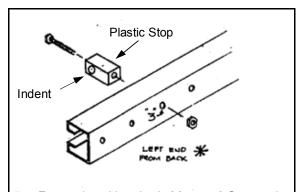


5. Fasten the white plastic **Live end Stop** to the left section of base frame as shown. Fasten at the 3rd hole inward on the left end of the **Strongback**. Use a 2.5" bolt and hex nut. Be sure the indented side faces outward.

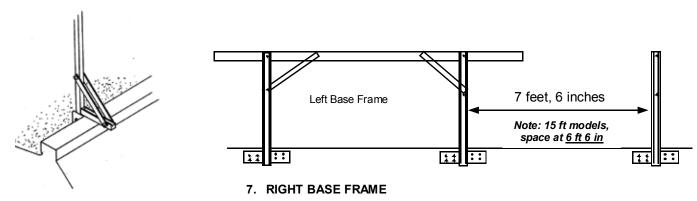

6. ATTACH RIGHT LEG CHANNEL and BRACES


Secure **right Leg** channel and braces in the same fashion as the left Leg.

Screw another **Leg** to the wall, exactly 7'6" to the *right* of the *right* leg from FIG 4. (15 ft Models, space at 6'6") Be sure the leg is plumb. **Repeat FIGS 2-4 to attach the remaining leg and Strongback to this leg.** This will create the *right* portion of the base frame.

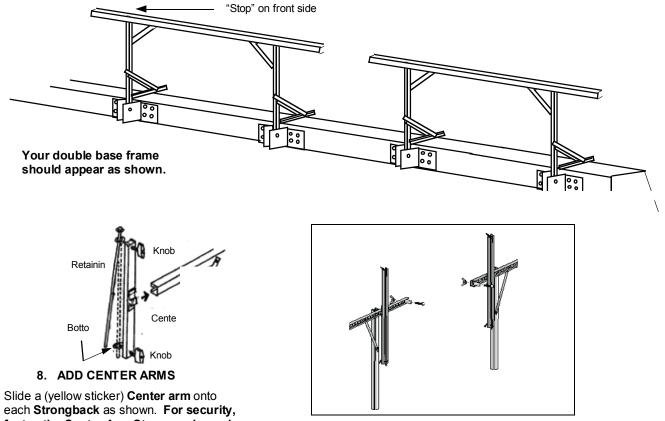

each Strongback as shown. For security, fasten the Center Arm Stops as shown in FIG 8A.

FIG 8A—Place **Center Stops** in 1st hole on each base frame as shown, using bolt, wing nut and plastic sleeve. (View is from front of frame).

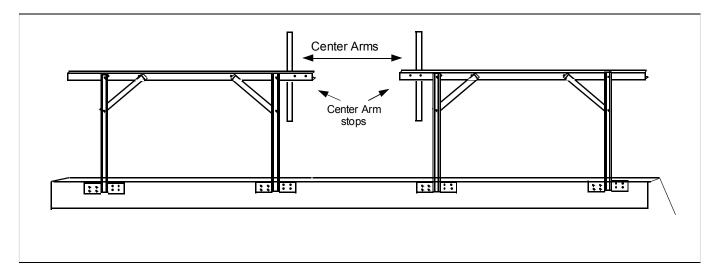

DO NOT DISPLAY A BANNER ON THIS FRAME IN WINDS ABOVE 45 MPH ! !

QUESTIONS? PROBLEMS ? CALL VOXPOP CUSTOMER SERVICE TOLL FREE AT : 1-800-3-VOXPOP (386-9767)

TO INSTALL A BANNER ON YOUR FRAME, SEE THE ATTACHED SHEET,

"INSTALLING THE BANNER: " SAVE THIS SHEET FOR FUTURE USE!

If this frame is installed by an installer, please give this sheet to the location manager.

Copyright 2009, Voxpop Marketing Systems P.O. Box 200 Berlin, MD 21811