
Wall Swiveler System Installation Instructions

TOOLS NEEDED: Power driver with Phillips head driver bit

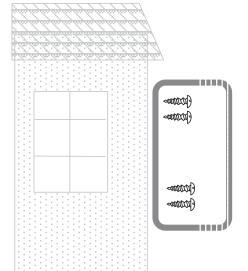


1

Position frame at desired location and fasten directly to the wall or other flat surface with the screws provided. Some surfaces may require specific fasteners. Call Voxpop for assistance.




Insert the 1/4" rod through the CENTER FLUTE in the coroplast panel.


Slide the plastic collars on the top and bottom of the rod. You will need to hold the bottom collar to keep it from falling off.

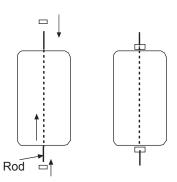




Holding the bottom collar on the rod, lift the panel and insert the top of the rod into the thru-hole in the Top Arm. Push it as high as it will go. The bottom of the rod will just barely clear the bottom Arm. Maneuver the bottom of the rod into the hole in the bottom Arm.

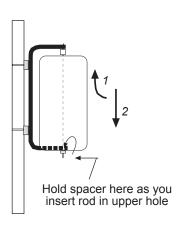


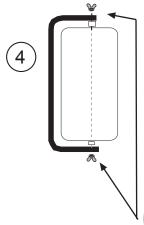



Hold the rod at the bottom to keep it from slipping down. Screw a locking wing nut onto the threaded end of the rod at the TOP first, and then the bottom, as shown. Tighten securely.

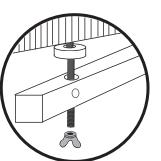



Finished display

Manufactured in the USA by



10746 Worcester Highway P.O. Box 200 Berlin, MD 21811 800-386-9767 Questions? Problems? Call Voxpop for assistance.

1-800-386-9767

or e-mail service@voxpopms.com