


Circle Swiveler - Installation Instructions

Parts in Box					
Tools Required		Power drill with screw tips * 3/16" regular drill bit * 3/16" masonry bit			

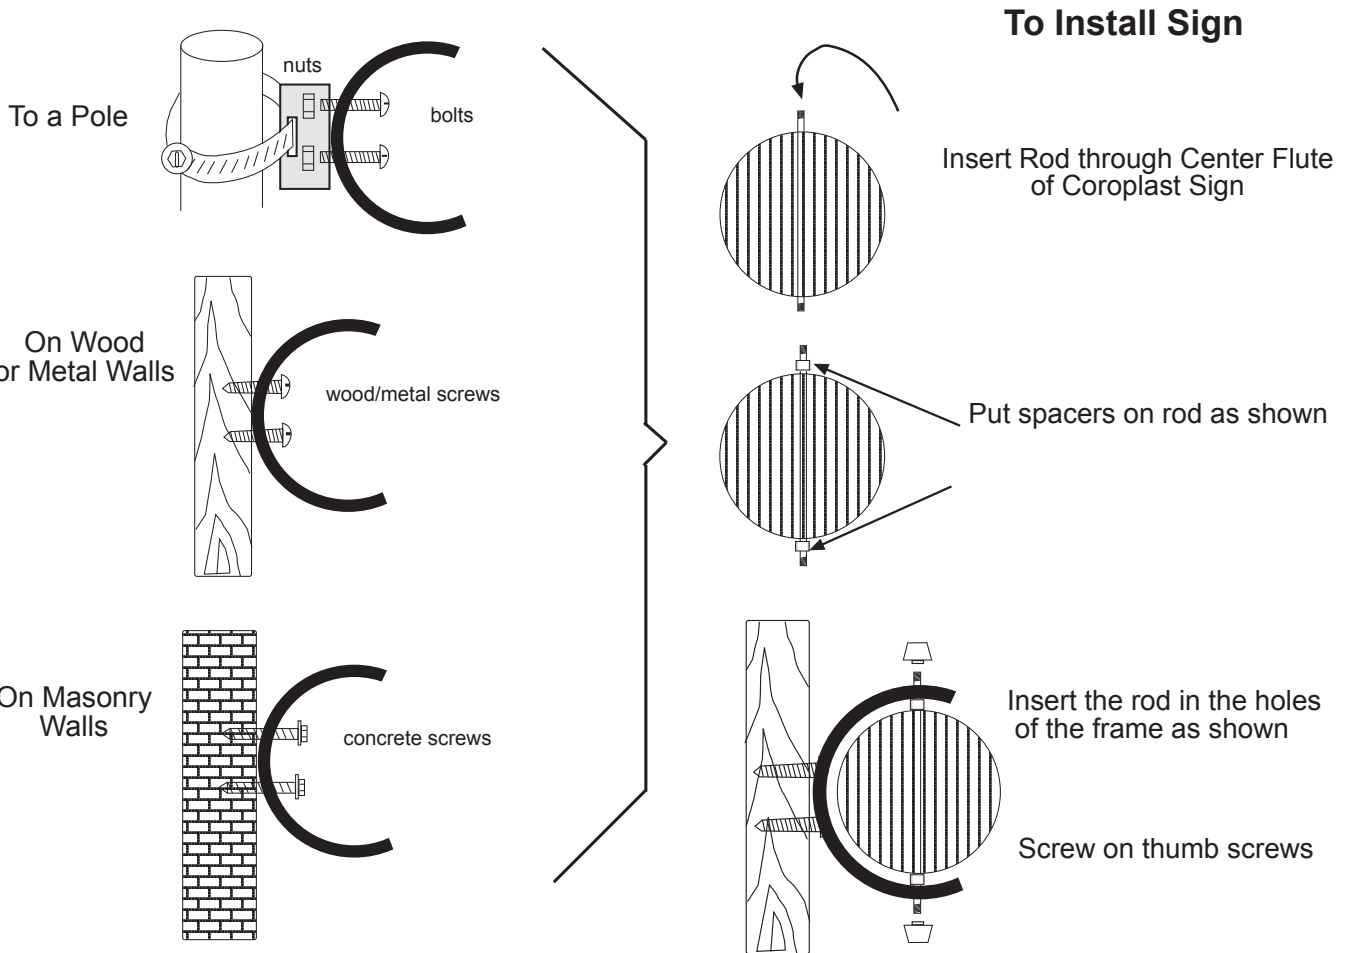

On wall installation - pre drill holes in wood, metal or concrete before inserting screws. For masonry walls, be sure to drill hole deeper than the length of the screw.

For questions or problems with hardware or installation

Call 1-800-386-9767
1-410-641-1090

Manufactured in the USA by
VOXPOP
 MARKETING SYSTEMS
 10746 Worcester Highway P.O. Box 200
 Berlin, MD 21811 800-386-9767