


Installation Instructions for Pre-Sell Menu Board

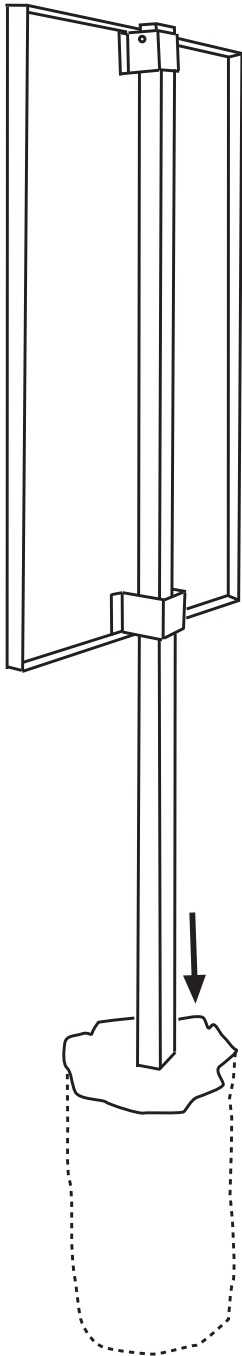

For Permanent Installation:

1. Dig a hole in the ground approximately 12" in diameter by 18" deep.

It can be the choice of the installer whether the unit be assembled first and then placed in the center of the hole, or simply center the Post first and then slip the Board on the Post. In either event it is important to keep the post centered and plum. NOTE: In either case, use the bolt and wing nut provided to secure the Board to the top of the Post

2. Backfill the hole with a suitable gravel/cement mix and tamp firmly around the post. It might be necessary to brace the Board to keep it plum until the mixture hardens.

For Semi-Permanent Installation:

Follow the same procedure as above except back fill with a sand and gravel combination that will pack firmly.

Manufactured in the USA by

VOXPOP
MARKETING SYSTEMS

10746 Worcester Highway P.O. Box 200
Berlin, MD 21811 800-386-9767